

THE ULTIMATE CHOICE

LAZER


GARAGE DOOR OPERATORS



NEW!
LASER GUIDED
PARKING SYSTEM

SECTIONAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS

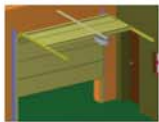

SECTIONAL

Application:	Domestic
Max. Operations:	20 per day
Max. Door Size:	12m ²
Travel Time:	± 20secs
Lifting Force:	1200N
Input Voltage:	230V AC
Output Voltage:	22V AC
Transformer Input:	230V AC
Motor Voltage:	24V DC
Battery (Optional):	24V
Drive Type	Chain
Limits:	Programmable
Light:	24V 21W
Light Time:	4mins
Receiver:	Rolling Code - 433Mhz
Safety:	Electronic Anti-Crush
Auto Close:	Adjustable, Max 75secs
Safety Beams:	Optional facility

FEATURES OF THE LAZER PRODUCTS

- Automatic light (operates for 4 mins)
- Operates on mains power. In the event of a power failure the **LAZER** will smoothly switch over to battery power without any interruption to garage function
- Auto-close facility (10 - 75 secs)
- External LCD screen to keep you informed
- Safety beam facility
- Electronic anti-crush safety feature
- Magnetic lock facility for added security
- Fully programmable with no mechanical limit switches
- Easy to install wireless wall console. Used to program the operator during installation, activate automatic light and lockout mode and open and close the door from within the garage.
- Lockout facility which enables the door to be locked in any position, which prevents the accidental closure of the door if a remote is triggered. Light will blink four times to indicate LOCKOUT is active
- Soft start and stop
- One touch programming making setup quick and easy
- Manual override facility

FUNCTIONALITY TO KEEP YOU INFORMED!

An external LCD screen shows the following messages:

- **MAINS FAIL** - either there is a power failure, a circuit trip or the plug has been switched off
- **LOW BATTERY** - warns that the operator battery is low
- **REMOTE BATTERY LOW** - warns that the remote battery is low
- **LOCKOUT** - a reminder that the operator has been placed in lockout mode
- **BEAMS BLOCKED** - a warning that the safety beams are blocked by an object or faulty and is therefore preventing the door from closing.
- **AUTO-CLOSE ACTIVE** - a reminder that auto-close facility has been activated
- **SERVICE DUE** - after approx. 2 years of usage the service due indicator will flash advising one to service the garage door to ensure optimum use of the operator
- **WEAR AND TEAR** - various messages to warn if there is wear and tear to the door or an obstruction.
- **FAULTS** - if a fault condition does occur the automatic light will flash repeatedly to draw attention.

